



Midaswei Trading Co., Ltd.


金威貿易有限公司

MW-Series Ionizer fan

Operating Instructions

for replacing the electrode needle hub

A. Overview

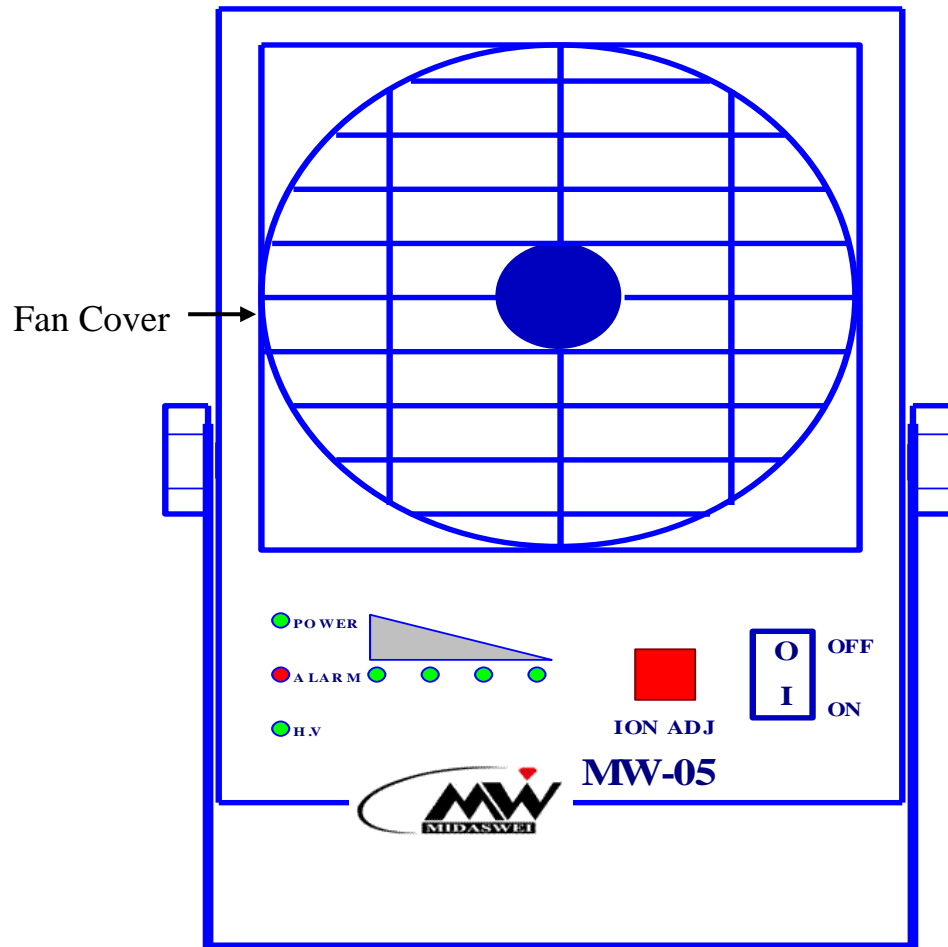

B. Instructions




Step 1. Unplug the power supply and lay the MW-Series Ionizer Fan on a flat surface.

Step 2. Push the latches on both sides of the Fan Cover (the position of the blue arrow in the left figure) and remove the Fan Cover.



Step 3. After removing the Fan Cover, as shown in the left figure.

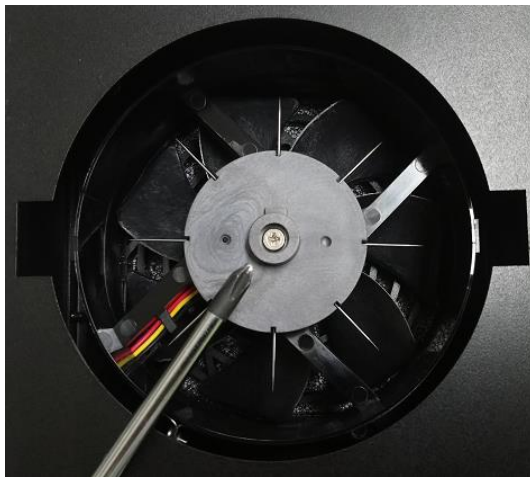


Step 4. Use a Phillips screwdriver to remove the electrode needle hub unit.

Step 5. Replace MW-DN01 to new product.

C. Attention



1. The tip of the electrode needle is sharp. Be careful in installation to prevent stab wounds.
2. The electrode needle hub has the positioning groove, which must be installed after positioning.

D. Dimension

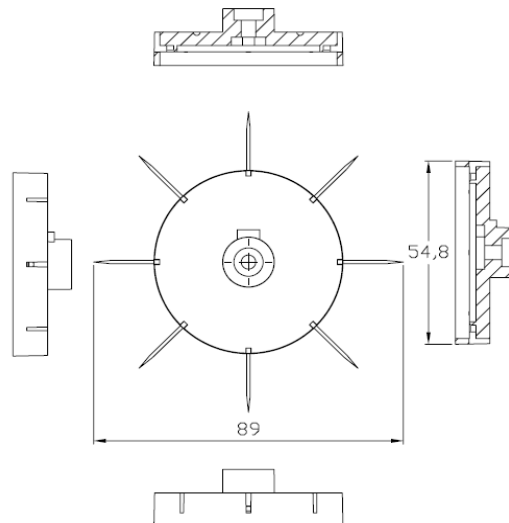

E. Specification of Outer Case

1. The electrode needle is covered with 2 pieces of foams and the sides are fixed with tape.
2. Place the 2PCS electrode needle hub in the 110mm*110mm*35mm paper box.
3. 110mm*110mm*35mm carton 7 pcs is 1 stack.
4. 251mm*242mm*270mm carton can be put into 28pcs carton.

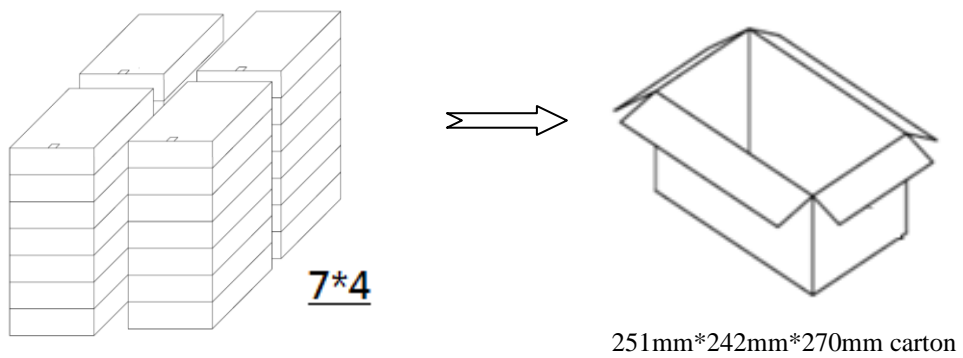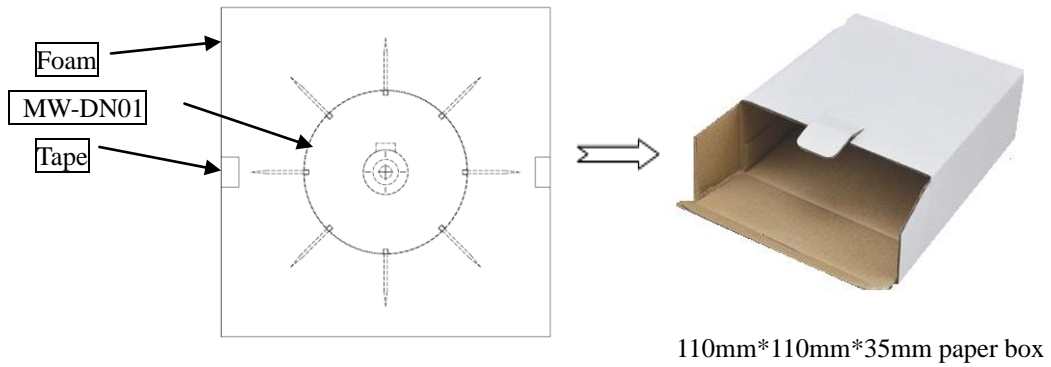

ITEM	NAME	Qty	pcs
01	Electrode needle hub MW-DN01	1	1
02	110mm*110mm*35mm paper box	1	2
03	251mm*242mm*270mm carton	1	56