



**Midaswei Trading Co., Ltd.**


**Midaswei MW-05 Ionizer Fan  
Instruction Manual**

Address: Room A, 9F, No.33, Sec.2 Roosevelt Road, Taipei 10643, Taiwan, R.O.C

Tel: 886-2-2396-5048

Contact e-mail: [midas001@midaswei.com](mailto:midas001@midaswei.com)

# A. Overview

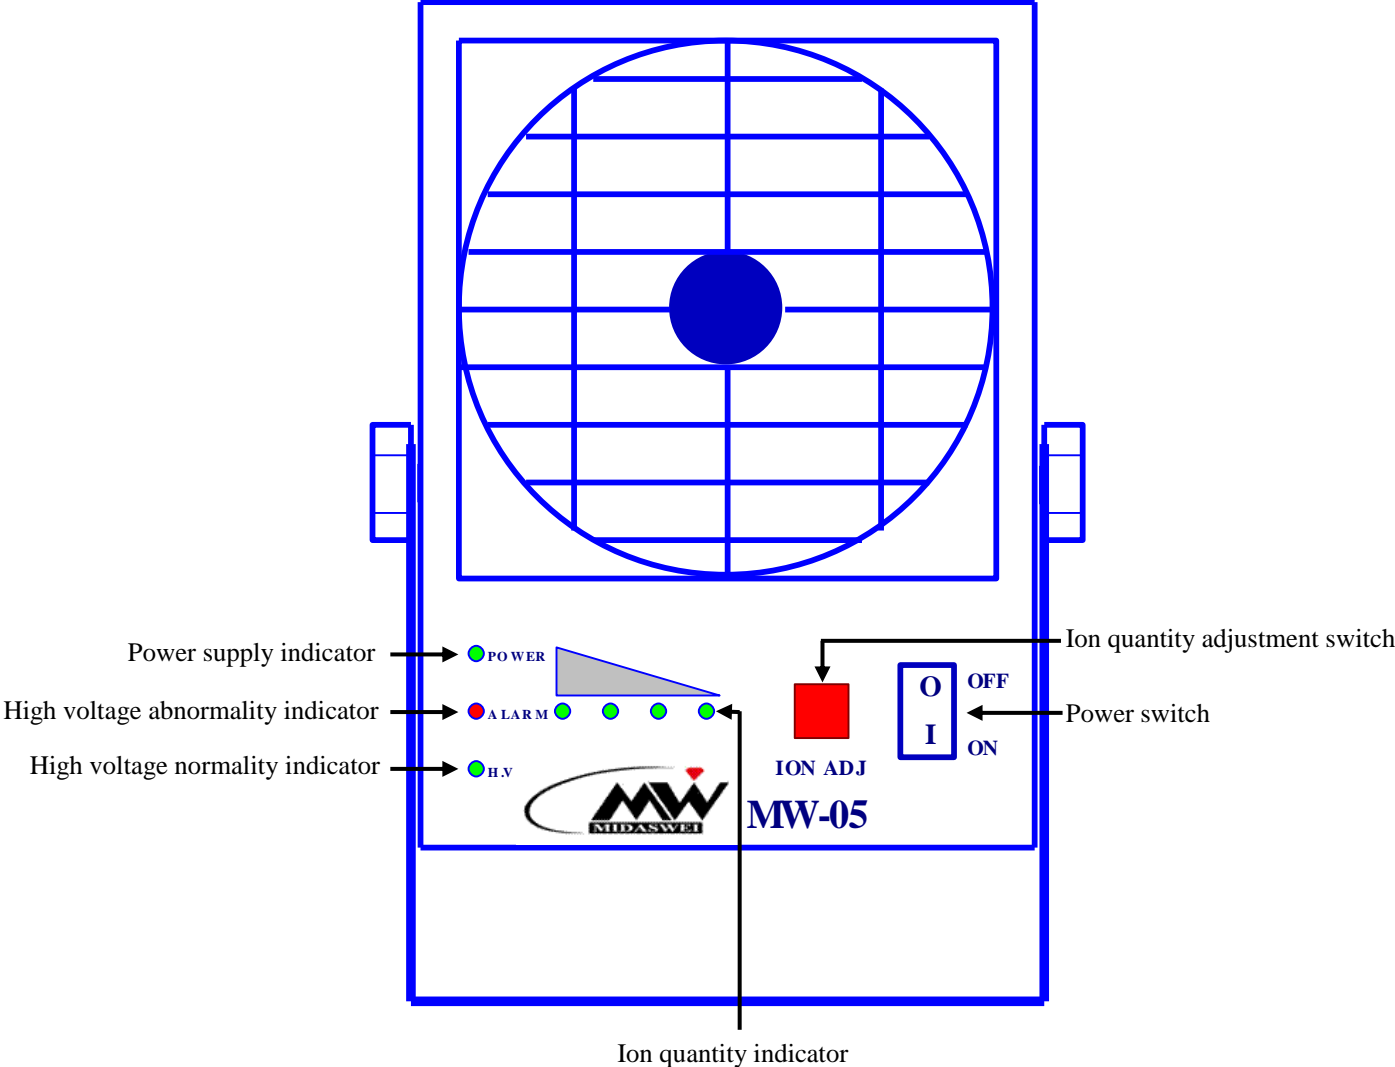

## B. Operating instructions

MW-05 is an ionizer fan with five-stage adjustable ions quantity, fixed air volume and a protection of high voltage output abnormal. By using with the accessory AC adapter, MW-05 is suitable for 110Vac/220Vac supply voltage.

### 1. AC adapter installation

Please connect the plug of the accessory AC Adapter with 110Vac/220Vac power outlet, and insert the output of the AC Adapter into DC IN connector on the back of ionizer fan. **Note: do NOT use non- accessory AC adapters.**

### 2. Operation

MW-05 is an ionizer fan with sequentially five-stage adjustable ions quantity. The operation rule is as follows,

#### 2.1 Initial Stage

Turn the power switch ON, and the fan spins up. 'POWER' LED and 'H.V.' LED become light up. The ion number is zero in initial stage.

#### 2.2 First stage

Push the ion quantity adjustment switch (ION ADJ) in the initial stage, MW-05 will enter into first stage. The fan keeps spinning and the buzzer will beep once. The 'POWER' LED, 'H.V.' LED and four LEDs of ion quantity indicator become light up. The generated ion number is largest in first stage.

#### 2.3 Second stage

Push the ion quantity adjustment switch (ION ADJ) in the first stage, MW-05 will enter into second stage. The fan keeps spinning and the buzzer will beep once. The 'POWER' LED, 'H.V.' LED and right-hand side three LEDs of ion quantity indicator become light up. The generated ion number is secondly large in second stage.

#### **2.4 Third stage**

Push the ion quantity adjustment switch (ION ADJ) in the second stage, MW-05 will enter into second stage. The fan keeps spinning and the buzzer will beep once. The 'POWER' LED, 'H.V.' LED and right-hand side two LEDs of ion quantity indicator become light up. The generated ion number is medium in third stage.

#### **2.5 Fourth stage**

Push the ion quantity adjustment switch (ION ADJ) in the third stage, MW-05 will enter into fourth stage. The fan keeps spinning and the buzzer will beep once. The 'POWER' LED, 'H.V.' LED and rightmost LEDs of ion quantity indicator become light up. The generated ion number is little in fourth stage.

#### **2.6 Initial stage**

Push the ion quantity adjustment switch (ION ADJ) in the fourth stage, MW-05 will re-enter into initial stage. The fan keeps spinning and the buzzer will beep once.









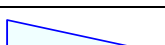
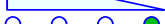


### **3. Abnormal condition**

3.1 When the output high voltage is abnormal, such as the internal cable has poor connection or the discharge needle unit does not discharge, the 'ALARM' LED becomes light up and the buzzer sounds. If this abnormal condition is not solved within 1 minute, MW-05 will be locked.

3.2 When the foreign object contacts the discharge needle unit, 'ALARM' LED becomes light up and the buzzer sounds. If this abnormal condition is not solved within 1 minute, MW-05 will be also locked.

3.3 Holding the ion quantity adjustment switch (ION ADJ), the buzzer sounds until release the ion quantity adjustment switch.
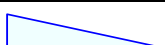
### 4. Indication/Function

Stage	Ion quantity	LED indication	Fan	Buzzer
Power ON (Initial stage)	zero	<ul style="list-style-type: none"> <li>● POWER </li> <li>○ ALARM </li> <li>● H.V.</li> </ul>	Operation	Stop
1 <sup>st</sup> stage	Largest	<ul style="list-style-type: none"> <li>● POWER </li> <li>○ ALARM </li> <li>● H.V.</li> </ul>	Operation	Beep
2 <sup>nd</sup> stage	Secondly large	<ul style="list-style-type: none"> <li>● POWER </li> <li>○ ALARM </li> <li>● H.V.</li> </ul>	Operation	Beep
3 <sup>rd</sup> stage	Medium	<ul style="list-style-type: none"> <li>● POWER </li> <li>○ ALARM </li> <li>● H.V.</li> </ul>	Operation	Beep
4 <sup>th</sup> stage	Little	<ul style="list-style-type: none"> <li>● POWER </li> <li>○ ALARM </li> <li>● H.V.</li> </ul>	Operation	Beep
Hold ION ADJ		Keep original state	Operation	Raise alarm
High voltage abnormality		<ul style="list-style-type: none"> <li>● POWER </li> <li>● ALARM </li> <li>○ H.V.</li> </ul>	Operation	Raise alarm

## **C. Cleaning and Maintenance**

1. Clean the discharge needle by a soft brush at least once a week. Do NOT clean the discharge needle by any hard object, or the needle tip will be damaged.
2. If the needle tip is damaged, replace the discharge needle unit immediately to maintain proper function.
3. The discharge needle may have carbon deposits and consumption due to corona effect. It is recommended to replace the discharge needle unit every 3 months or when the static elimination performance is degraded.
4. Clean both side louvers by a soft brush or compressed air at least once a week.
5. If the filter is used, the filter cotton should be cleaned or replaced per month.

### **CAUTION:**


- \* You should always turn OFF the power before maintaining the ionizer fan.
- \* The needle tip is very sharp. Pay attention to avoid being stabbed.

**D. Specification**

Name	MW-05
Power supply voltage	Accessory AC adapter: Input: 100Vac~240Vac, Output: DC24V
<b>Input power</b>	<b>15W</b>
High voltage output	AC 4400V
<b>Static charge removal time</b>	<b>±1KV→±100V within 1 sec at distance of 30cm</b>
<b>Balance Voltage</b>	<b>±2V at 30cm central position</b>
Air flow	2.84 m <sup>3</sup> /min
Quantity of produced ozone	0.05ppm or less (testing distance 30cm)
Ambient temperature	0~40°C
Ambient humidity	15~65%RH (No condensation)
Dimension	185(L)×79(W)×197(H)mm (including protruding portion)
Weight	1300g approx. (including stand)
Noise	50dB(A) @ 1m
Accessory	Instruction manual, AC Adapter and power cable.

Note: Testing instrument is Kleinwachter EFM-022, Performance may be degraded, depending on working conditions and surrounding environment.

### E. Dimensions

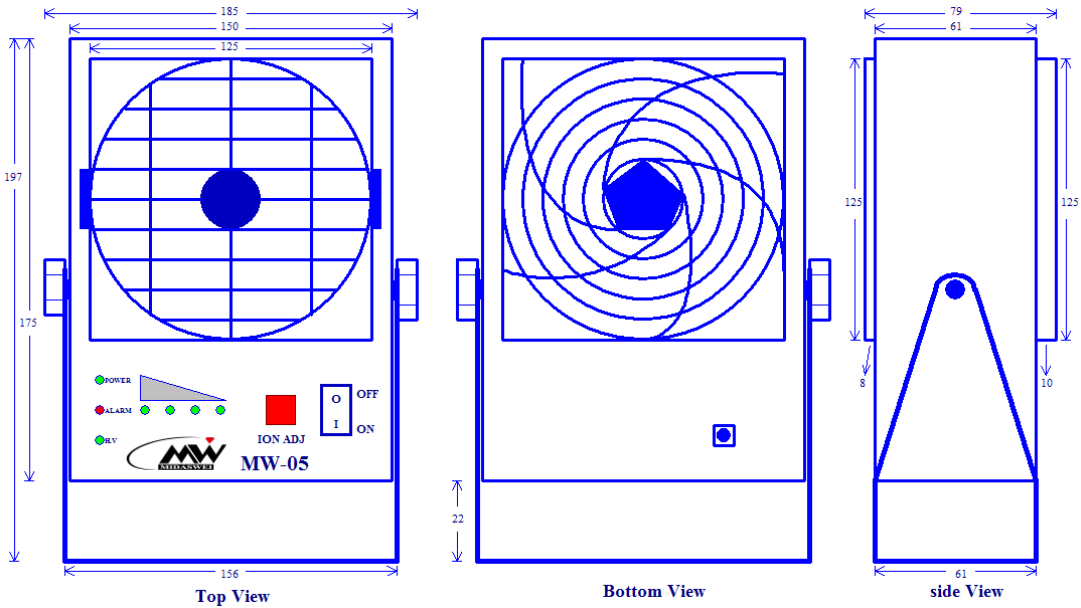

Unit: mm




## F. Safety Precaution


1. Please read the instruction manual before installation.
2. Both side louvers cannot be blocked or inserted by any foreign object.
3. Do NOT use any non-accessories AC adapter.
4. Do NOT use the ionizer fan in a flammable or explosive environment.
5. Do NOT replace any part or attempt to self-repair.
6. Under normal use and proper care, we provide one-year warranty for MW-05. However, consumables (discharge needles, filter cotton, etc.) are NOT within warranty.
7. Must use genuine discharge needle hub or discharge needle, or unpredictable dangers may occur.
8. When the ionizer fan is working, it generates a high voltage. Do not use it when each louver is taken off.
9. The ionizer fan generates ozone in operation. Ventilation is required when operating in a confined space.
10. Midaswei ionizer fan is designed for general industrial and indoor use. They are not suitable for outdoor use as well as not suitable for environments that cause life or property safety, such as nuclear power plants, aircrafts, ships or hospitals.
11. Avoid operating the ionizer fan in the following locations: locations with soot, dust, flammable substances, acid-base solvent or gas, vibration, impact, strong magnetism, strong electric fields, and drastic changes in temperature.

## G. Set-up Pin-base of MW-05


Step 1. Open fan cover

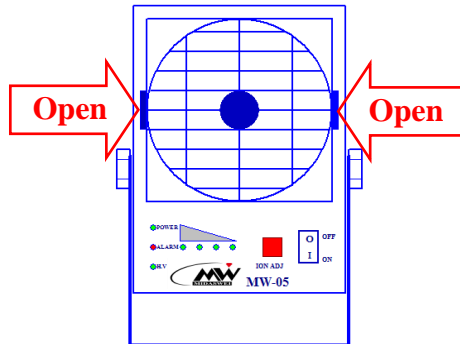


Step 2. Pick-up the screw and pin-base

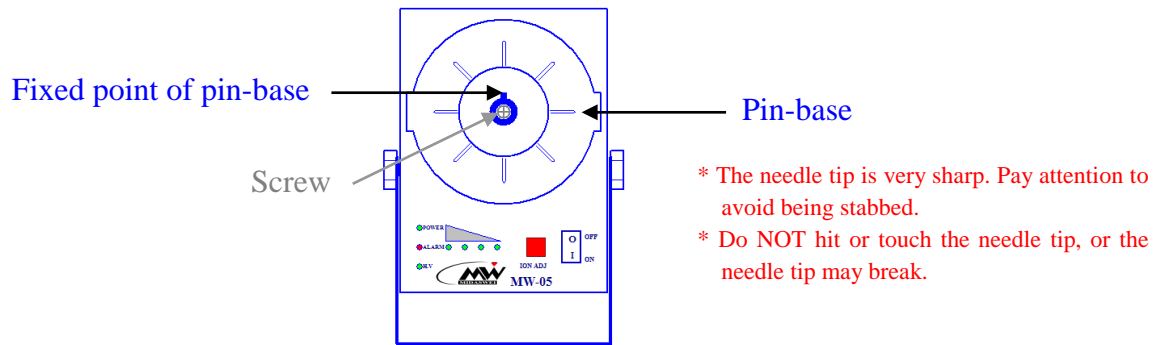

Step 3. Replace the new pin-base and fix the screw

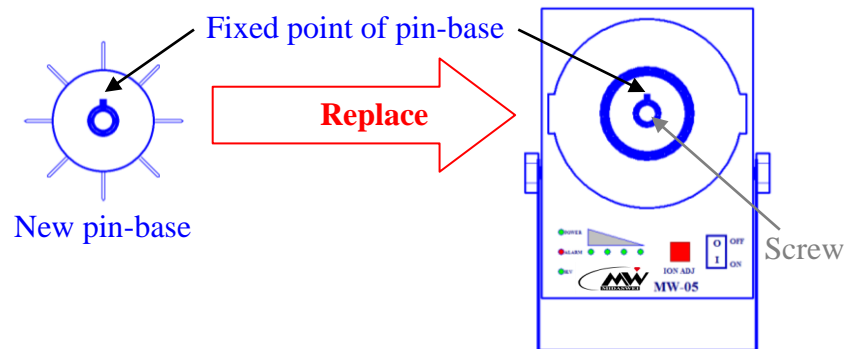


Step 4. Close fan cover

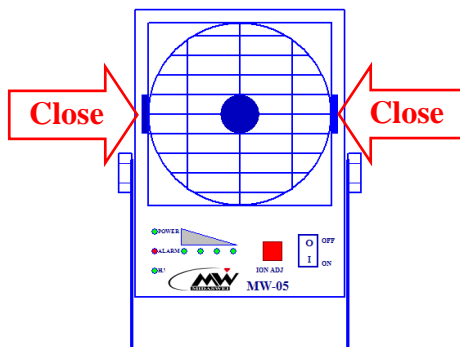

## H. Packaging

1. Each Ionizer set includes a MW-05, a Power adaptor and a Power cord.
2. Place an Ionizer set in the 284mm\*253mm\*110mm paper box ◦
3. 4 PCS 284mm\*253mm\*110mm paper box is 1 stack ◦
4. 497mm\*337mm\*293mm carton can be put into 4 paper box.

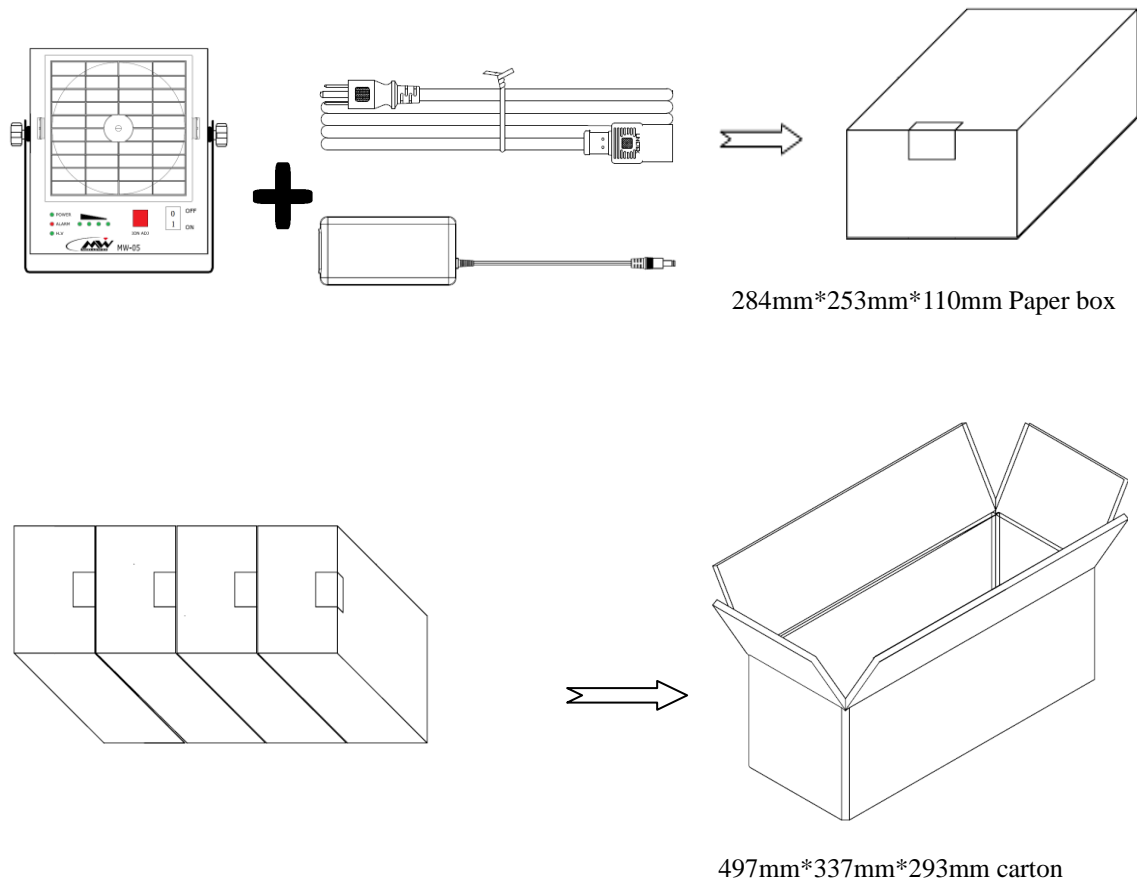

ITEM	NAME	Qty	pcs
01	MW-05,	1	1
02	POWER ADAPTOR & POWER CORD	1	1
03	284*253*110 mm paper box	1	1
04	497*337*293 mm carton	1	4

## I. Attachment 1

1. The input voltage and current difference MW-05 and A vendor :
  - a. The Positive and negative voltage difference : MW-05  $\rightarrow \Delta 1V$  ; A vendor  $\rightarrow \Delta 1.2V$  °
  - b. The Positive and negative current difference : MW-05  $\rightarrow \Delta 7.6mA$  ; A vendor  $\rightarrow \Delta 44mA$  °
  - c. The angle difference : MW-05  $\rightarrow$  No angle difference ; A vendor  $\rightarrow 76^\circ$  °

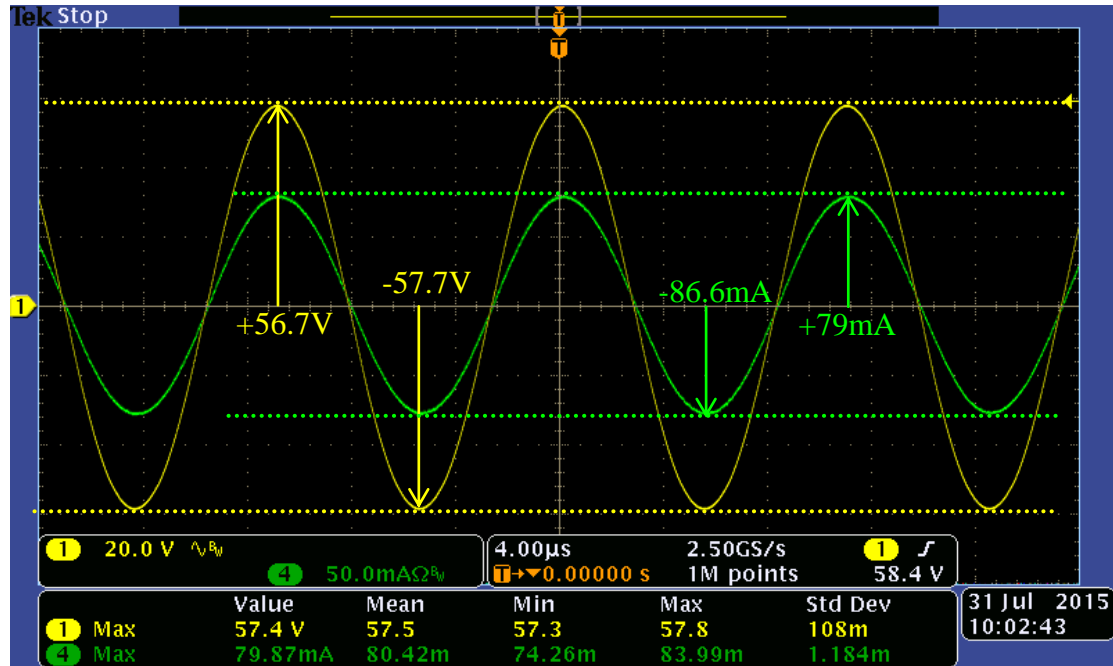


Fig1. MW-05 input voltage and current waveform


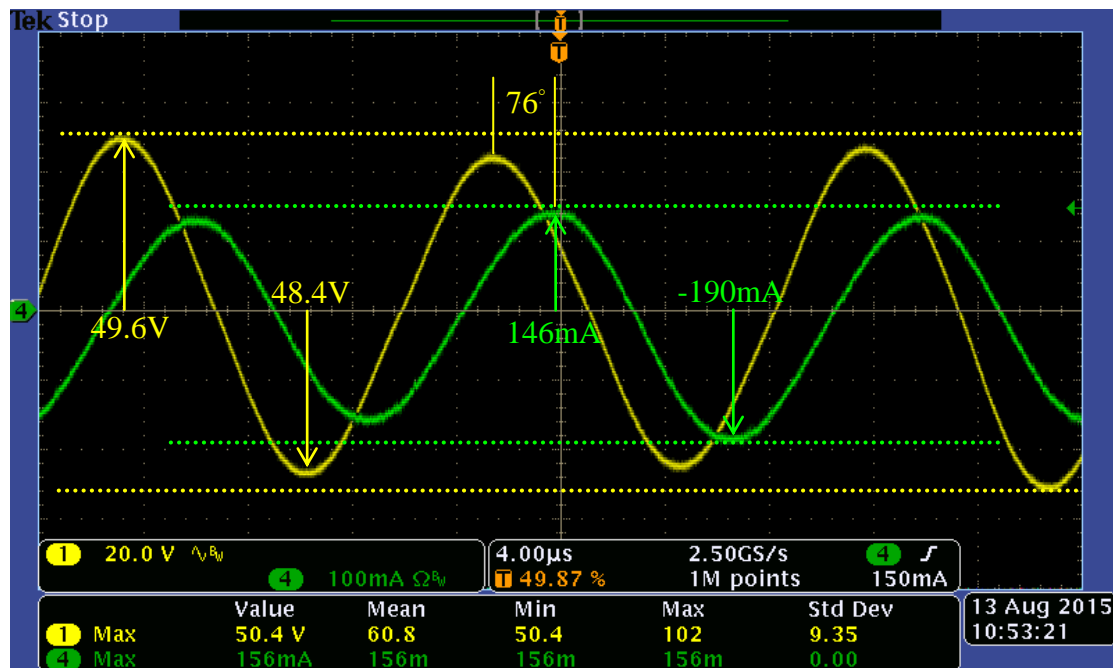


Fig2. A vendor input voltage and current waveform

## J. Attachment 2

The decay ability of MW-05 measured on 2018/11/13.

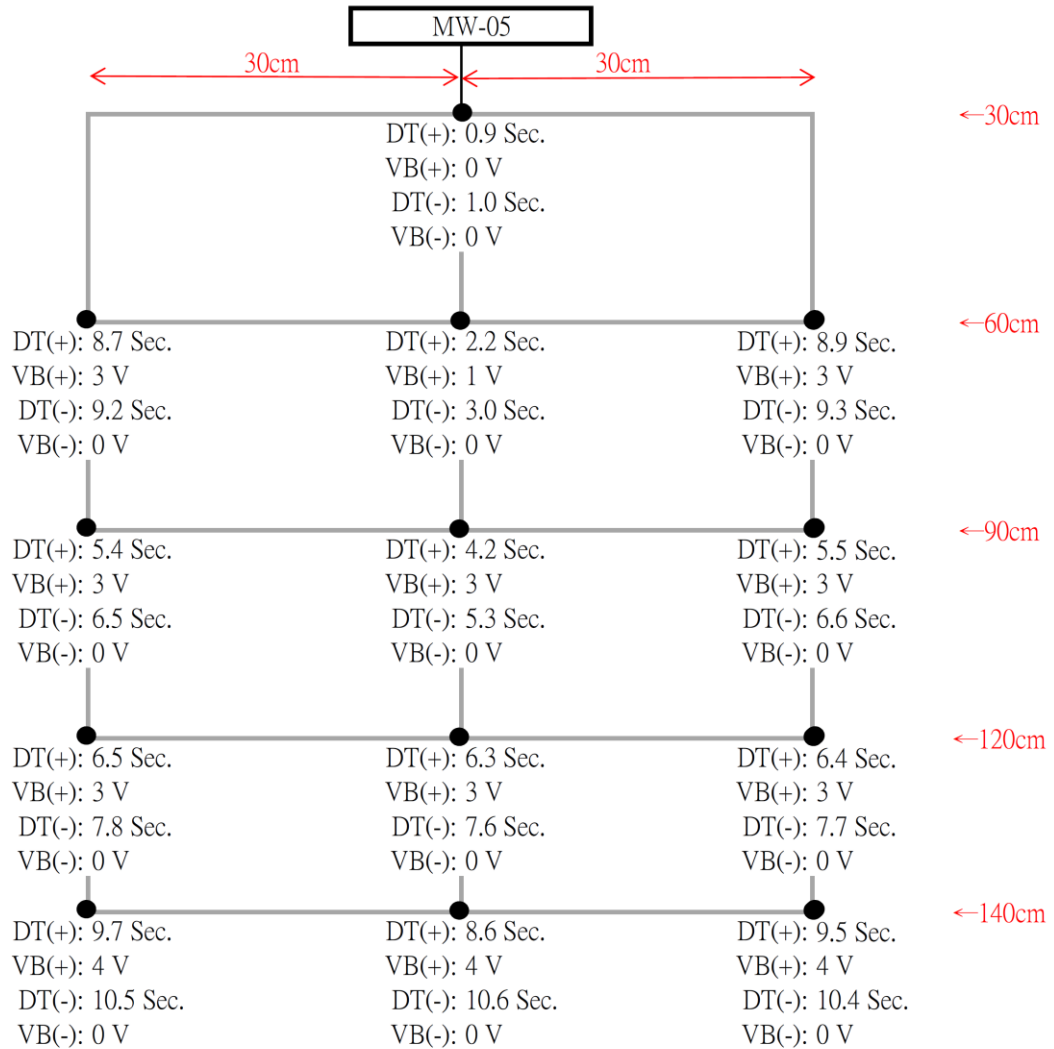

Note: 1. DT(±) : ±1000V--> ±100V Decay Time  
 2. BV(±) : Balance Voltage  
 3. Ambient condition : 23.5°C , 65%RH

2018/11/13



Midaswei Trading Co., Ltd.  
 金威貿易有限公司

### K. Attachment 3

The decay capacity compared MW-05 with Japanese brand.

Test date : 2015/08/27

Test location : Semiconductor plant

Test distance : 100cm

Test times	Decay	MW-05		Japanese Brand	
		Time(sec)	Balance(V)	Time(sec)	Balance(V)
#1	+	4.2	6	3.1	13
	-	5.7	-9	3.6	-11
#2	+	4.1	0	3.4	8
	-	5.7	-5	4.1	-10
#3	+	3.9	0	2.8	12
	-	4.7	-9	4.1	-9
#4	+	4.7	0	3.4	12
	-	5.4	-7	4.4	-15
#5	+	4.4	0	3.5	14
	-	6	-9	5.2	-11

- Note :
1. The decay time of MW-05 than the Japanese brand long, but balance capacity of MW-05 is better than Japanese brand.
  2. Now MW-05 use 3100rpm fan, if replaced 3600rpm fan can improve decay time.